


## AKKOMSAN TRAKTOR PTO AIR COMPRESSOR

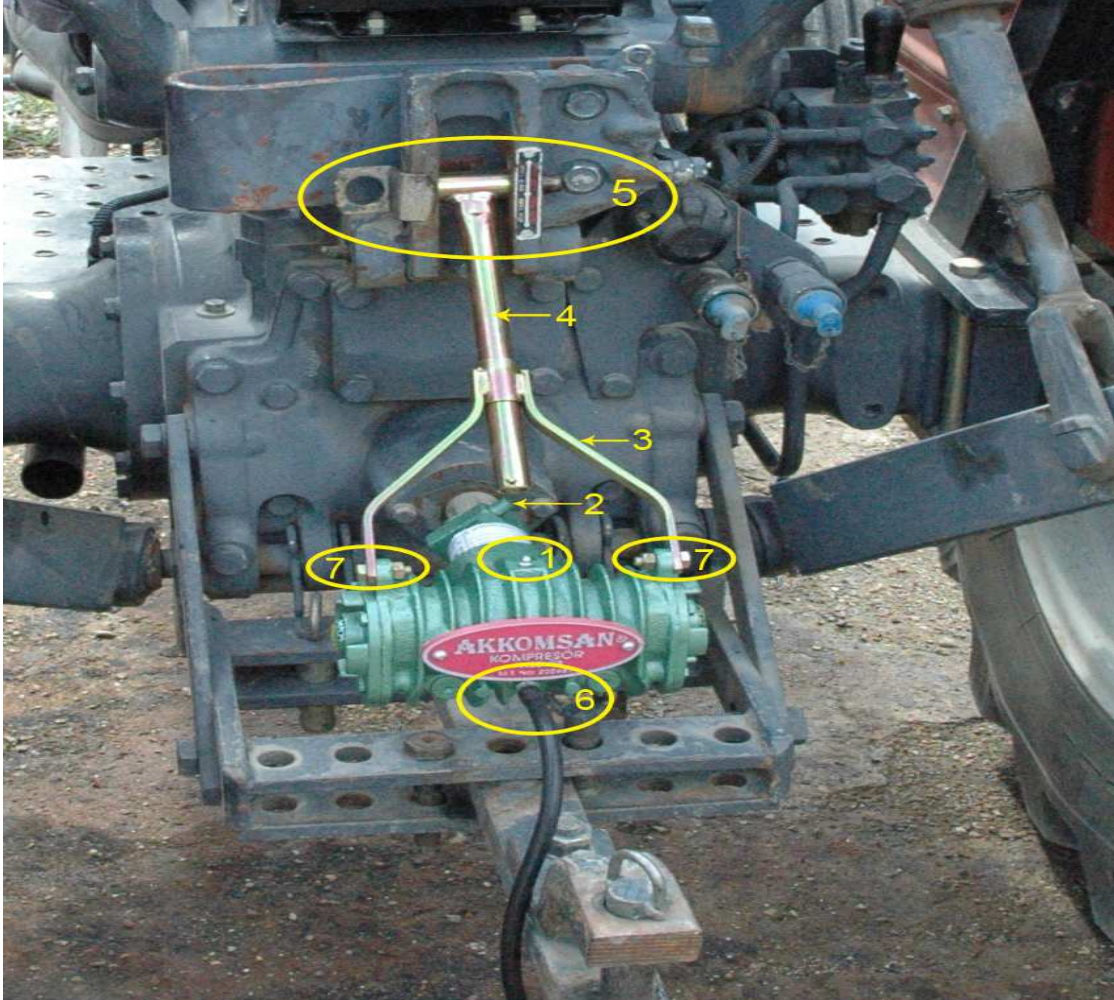

### COMPRESSOR USER GUIDE

- Before using your compressor, firstly you have to inject 60 gr grease oil from the screw of grease (See Number 1) ,( Pumping the Grease pump 20 times is approximately 100 gr.)
- Connect the compressor to your tractor using the special lock (See Number 2).
- Connect the pieces (See Number 3 & 4) to the back of your tractor.
- Set the air hose to your compressor first, then to your wheel by its special nut(See Number 6)
- You can start using the compressor by keeping PTO (power transportation organ) of the tractor between 300-400 cycles.
- Check the bolts and nuts (See Numbers 7) periodically.
- Keep the compressor in its original box to protect it from water, dust, and dirtiness, etc.after every use.

FEATURES;

CYLINDER QTY.	2 AD/PCS
CYLINDER DIAMETER	55,00MM
STROKE	42,00MM
STROKE CAPACITY	90LT/Min.
WORKING PRESSURE	8 BAR
PTO SAFHT CYCLE	540RMP
WEIGHT	9,00 KGS
AIR HOSE	4,50MM x4,00 METERS
AIR HOSE CLAMP	8x13
PACKING	CARTON BOX
PRICE / EXWORKS	

